| I'm not robot | reCAPTCHA |
|---------------|-----------|
| | |

Continue

1. KB-6622V IMPORTANT SAFETY INFORMATION READ ALL INSTRUCTIONS BEFORE USING STEAM CLEANER. USE ONLY AS DIRECTED. 2. USER'S GUIDE THANK YOU NOTES: Congratulations on your choice of the H2O MOP X5™, a new more compact and lighter steam cleaner with a detachable hand-held steamer. The H2O MOP X5[™] is a new way of cleaning that is effective and far more hygienic than converting water to steam using a microfiber floor cloth to enhance absorbency. When contact is made with floor surfaces, dirt and grime can be eliminated in a matter of seconds. Since the H2O MOP X5TM uses the active power of steam without the use of detergents or soap, it is environmentally friendly. Regular steam cleaning also helps destroy dust mites, some types of bacteria, fungus and mildew. 3. USER'S GUIDE ONE YEAR LIMITED WARRANTY CONTENTS Thank you for your purchase of the amazing H20 Mop X5[™]. With this warranty, the H20 Mop X5[™] is warranted, to the original owner, for one (1) year from the date of purchase against defects in material and workmanship under IMPORTANT SAFEGUARDS ... 6 Should your H20 Mop X5™ prove defective within one (1) year from date of purchase, do not return your unit to the point of purchase. Please call Thane Direct's Customer Care Team at 1-877-771-7017. Thane Direct will issue a Return Merchandise Authorization (RMA) number to the purchaser to process the return of the unit. Please package your ACCESSORIES. 7 H20 Mop X5[™] carefully to avoid damage in transit. Under this warranty, Thane Direct, will repair or replace any parts found to be defective. This warranty is effective only if the product is purchased and operated in Canada. This ... 8 - 10 extends only to personal use and does not extend to any product that has been used for which it is not intended. There are no warranties other than that expressly set forth herein. This warranty is not transferable. After the expiration of HOW TO USE THE H2O MOP ..11 - 15 the warranty, the cost of the labor and parts will be the responsibility of the original purchaser. Thane Direct, is not responsible or liable for indirect, special or consequential damages arising out of or in connection HAND-HELD STEAMER 16 with the use or performance of the product or other damages with respect to any economic loss, loss of property, loss of removal, installation, other consequential damages of HOW TO ASSEMBLE THE HAND-HELD STEAMER 16 - 17 whatsoever nature, failure to follow instructions or warnings in owner's manual or use of products in a manner for which they were not designed. Some Provinces do not allow the exclusion or limitation of incidental or consequential HOW TO ASSEMBLE THE OPTIONAL ACCESSORIES. . 18 - 19 damages. Accordingly, the above limitation may not apply to you. This warranty gives you specific legal rights. You may also have other rights, which vary from Province to Province. HOW TO USE THE HAND-HELD STEAMER. . 20 - 21 THIS WARRANTY DOES NOT APPLY TO THE FOLLOWING: $\,$ HOW TO USE THE OPTIONAL ACCESSORIES . . 22 - 27 1. Damage due to accident, misuse, abuse, commercial use or . 28 3. Unauthorized modification or commercial use. 4. Damage in return transit. CLEANING AND MAINTENANCE vandalism. 2. Improper or inadequate maintenance. AFTER USE. .. 29 - 31 5. "Normal" wear of parts (wear and tear that occurs over time and with use). 6. Repairs made by an unauthorized service technician. How to decalcify the Water Tank interior TO OBTAIN SERVICES - The original purchaser shall contact our Customer Care Team via e-mail at • Cleaning procedure to remove lime scale customercare@thane.ca or by phone at 1-877-771-7017 and depending on the extent of the service required, the purchaser shall have the obligations and responsibility to: By using Scraper • Pay for all services and parts not covered by the limited warranty. By using cleaning solution • Include a cheque or money order in the amount of \$14.95* to cover the shipping and handling, payable to "Thane Direct Canada, Inc." • Cleaning blocked steamer accessories. • Carefully package the product using adequate padding material to prevent damage during transit. The original packaging is ideal for this purpose. TROUBLESHOOTING GUIDE 32 • Include in the package: the owner's name, address, telephone #, and a detailed description of the problem. • Provide the proof of purchase, which includes date of purchase. ONE YEAR LIMITED WARRANTY ... 33 • Send via Insured* Parcel Post or courier to: H20 Mop X5™ C/O Northland Fulfillment Inc. 277 Humberline Drive Etobicoke, ON, M9W 0B6 FOR ALL INQUIRES, PLEASE CONTACT OUR CUSTOMER CARE TEAM VIA E-MAIL AT customercare@thane.ca OR BY PHONE AT 1-877-771-7017 MONDAY-FRIDAY, FROM 8:30-5:00 EST. * Thane Direct Canada, Inc. is NOT responsible for any non-insured items lost in transit or costs incurred by the customer to return the product. 4. USER'S GUIDE IMPORTANT SAFEGUARDS TROUBLESHOOTING GUIDE PLEASE READ CAREFULLY. FAILURE TO FOLLOW THE PRODUCT ! WARNING INSTRUCTIONS WILL VOID YOUR WARRANTY. TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY, UNPLUG READ ALL INSTRUCTIONS BEFORE USING THIS STEAM CLEANER. APPLIANCE FROM OUTLET BEFORE SERVICING. As with any electric appliance, basic precautions should always be observed when using this product, including the following: Problem Possible Cause Solution! WARNING THE UNIT DOES NOT The unit is not plugged in Make sure the unit is POWER ON or turned ON plugged into a proper 1. Verify that the main voltage indicated on the product corresponds with the outlet and the switch is ON (I). voltage of your electrical outlet. Rated voltage: 110~120V, 60HZ, 1300W REDUCED STEAM OR Water Tank or NO STEAM Blocked Steam Nozzle Remove Mop Head and 220~240V, 50/60HZ, 1300W Clean the Nozzle. 2. To provide continued protection against risk of electric shock, only connect to Lime scale deposit Follow cleaning procedure properly grounded outlets. in this User's Guide to 3. This product is designed for domestic use only. remove lime scale. 4. Do not use outdoors. 5. Do not leave the H2O MOP X5™ unattended while plugged in. Unplug the STEAM ESCAPES Attachment is not Turn the unit OFF, allow it electrical cord when not in use and before servicing. FROM CONNECTIONS connected properly to cool down, disconnect 6. Do not allow the H2O MOP X5[™] to be used as a toy. Young children should the accessories and reattach be supervised to ensure that they do not play with the appliance. them properly. Close attention is necessary when used near children, pets or plants. Debris or obstructions at Remove the accessory and 7. This appliance is not intended for use by persons (including children) with the connection points check and clean connection reduced physical, sensory or mental capabilities, or lack of experience and points. knowledge, unless they are under supervision have been instructed how to use the appliance by a person responsible for their safety. THE CLEANING CLOTH The cloth gets saturated Remove wet cloth and 8. Never direct steam towards people, animals or plants. BECOMES WET with water replace with a new 9. Do not immerse the H2O MOP X5™ in water or other liquids. cleaning cloth (Optional item) or allow cloth to cool, then wring out and reattach. 3 32 5. USER'S GUIDE USER'S GUIDE of Cleaning blocked steamer accessories. 10. Do not use with damaged cord or plug. If the H2O MOP X5[™] is not working Due to the high mineral content of water in some areas, you may notice that less as it should, has been dropped, damaged, left outdoors, or immersed in steam comes out from the Hand-Held Steamer accessories. water, return it to the distributor. If the supply cord is damaged, it must be This may be caused by calcium buildup inside the tip of the nozzle. replaced by the manufacturer or a qualified repair facility to avoid hazard. How to clean calcium buildup: 11. Do not pull or carry the unit by the cord, use the cord as a handle, close a We recommend using a spray lubricant. Spray a small burst or two of the door on the cord, or pull the cord around sharp edges or corners. Keep lubricant inside the tip of the Jet Nozzle. After spraying lubricant inside the tip of the Jet Nozzle. according to the directions and run a 12. Never force the plug into an outlet. continuous jet of steam through the affected accessory for several minutes to 13. Do not use extension cords or outlets with inadequate electrical current remove the deposit. Once the steam pathway is clear, aim the steamer at a neutral carrying capacity. surface or a cleaning cloth to make sure no debris is emitted. 14. Unplug after each use. To safely unplug, grasp the plug and gently pull, do not unplug by pulling on the COMMEND PREFORMING THIS PROCEDURE IN A PROTECTED AND 15. Do not handle the plug or the H2O MOP X5TM with wet hands or operate WELL-VENTILATED AREA. without shoes. 16. Do not insert any objects into openings in the unit. Do not use with any opening Microfiber Cloth care: blocked. • Machine wash at 60 °C (140 °F) 17. Do not use fabric softener 19. Use extra caution when using on stairs. 20. Store your H2O MOP X5[™] indoors in a cool, dry place. 21. Keep your work area well lit. 22. Never put hot water or any other liquids such as aromatic, alcohol-based, or detergent products into the H2O MOP X5[™] Water Tank. This will make the operation unsafe and damage the unit. 23. Always keep the output for the steam clear. Avoid placing the steam opening on soft surfaces which may block the flow of steam. Keep the openings free from lint, hair and other potential obstructions to ensure proper steam flow. 31 4 6. USER'S GUIDE 24. Use only as directed in this manual. Use only manufacturer's 2) Use the Cleaning Pin to remove scale deposits from the small hole of the steam recommended accessories. outlet in the Main Body, as illustrated in Fig. 2. 2 25. Use of attachments not provided or sold by the manufacturer or authorized By swirling and pushing the pin up and down resellers may cause fire, electric shock or injury, you will clean the steam outlet. Always ensure 26. The liquid or steam should not be directed towards equipment containing that all scale debris have been removed from electrical components, such as the interior of ovens. the steam outlet before reassembling. 27. Do not expose to rain. Continue swirling Cleaning Pin until no further 28. Stop using the H2O MOP X5[™] if you observe water leakage, and contact a debris is evident. qualified technician. 29. Do not use the H2O MOP X5TM in enclosed spaces that are filled By using cleaning solution with flammable, explosive or toxic vapor such as paint thinner or oil-based 1) Prepare a solution with flammable, explosive or toxic vapor such as paint thinner or oil-based 1) Prepare a solution with flammable, explosive or toxic vapor such as paint thinner or oil-based 1) Prepare a solution of 1/3 white vinegar and 2/3 tap water and add to the water tank. paint. 30. Do not use on leather, wax polished furniture or floors, unsealed hardwood 2) Secure and position the unit to ensure steam released is aimed away from the or parquet floors, synthetic fabrics, velvet or other delicate floor or surrounding objects and surfaces. Plug the unit to produce steam until the 31 Do not use for space heating purposes. vinegar/water solution is used up. 32. Unplug appliance from outlet before servicing. 3) Repeat the above procedure as many times as necessary until a normal steam 33. Do not touch hot surfaces. flow rate is achieved. 34. Do not place on or near a hot gas or electric burner, or in a heated oven. 35. To disconnect the unit, turn the Power Switch (O/I) to the "OFF" position, 4) Fill the Water Tank with fresh water, attach to the unit and release steam 37. Care should be taken when using appliance due to emission of steam. through the system until the Water Tank is empty. 38. To avoid circuit overload, do not operate another appliance on the steam cleaner. Do not leave the steamer unattended during the lime scale removal! WARNING DANGER OF SCALDING process and/or while in use. NOTICE HOUSEHOLD USE ONLY Perform a test cleaning on a suitable isolated area after each lime scale removal to Commercial use of this unit voids the manufacturer's warranty. ensure that there is no debris left in the system. ! WARNING DANGER OF SCALDING SAVE THESE INSTRUCTIONS 5 30 7. USER'S GUIDE CLEANING AND MAINTENANCE KEY FEATURES! WARNING Curved Handle BE SURE THAT THE UNIT IS DISCONNECTED FROM THE POWER OUTLET WHEN PERFORMING CLEANING. Upper Cord Wrap Drain the remaining water in the tank and clean the tank after every use. Please use detergent to clean the accessories (Jet Nozzle and Round Brush) when Power Supply Cord they are dirty, then wash with clean water and air dry. Cord Holder Curved Handle Lock Button How to decalcify the Water Tank, add one or two Extension Handle tablespoons of white vinegar to a full Water Tank, close the Water Tank cap and shake the contents. DO NOT TURN THE STEAMER ON. Lower Cord Wrap Let the unit sit for a few hours. Then, empty the Water Tank and refill with clean Extension Handle Lock Button water and empty until it rinses clear. Power Switch (O / I) with LED ON/OFF Light! WARNING Steam Regulator Water Tank Cap DO NOT IMMERSE THE H2O MOP X5. IN WATER. Water Tank Main Body • Cleaning procedure to remove lime scale Lock Button (on Main Body) If your H2O MOP X5™ begins to produce steam more slowly than usual or stops Mop Head producing steam you may need to remove lime scale can develop over Front view Back view time on the metal parts and greatly affect mop performance. It is necessary to remove lime scale on a regular basis, every 25 - 50 times you use a full tank of water or at least once a month, especially in areas with hard water. ACCESSORIES The frequency of lime scale removal depends upon the hardness of your tap water and how often you use the steam mop. 225ml The H2O MOP X5[™] uses tap water. However, in areas with hard water, 150ml 100ml 50ml distilled water should be used for better performance. Glider Microfiber Cloth Measuring Cup Cleaning Pin To remove lime scale from the H2O MOP X5[™], please follow these procedures: By using Scraper 1) Make sure that the H2O MOP X5[™] is disconnected from the power supply Jet Nozzle Round Brush (Brass) Round Brush (Brass) Round Brush (Nylon) before maintenance. 29 6 8. USER'S GUIDE OPTIONAL ACCESSORIES AFTER USE 1) Unplug Power Cord from outlet. 2) Allow Mop Pad/Cloths to cool down and carefully remove cleaning cloth from Mop Head, as cleaning cloth could still be hot. Window Cleaning Garment steaming Lint Cloth Cloth Cloth Cloth 3) Any water remaining in the Water Tank should be emptied prior to appliance storage. Always empty the Water Tank at the end of each use. 4) Let any water (that may remain as a product of condensation) drain from the steam opening prior to storing the appliance. 5) Wrap Power Cord around Upper and Lower Cord Wrap. Extension Hose Duster Window Cleaning Tool for the Hand-Heald Steamer 6) Wipe all surfaces of the H2O MOP X5[™] with a wet Mop Pad/Cloth may result in the formation of white marks on your floor. To remove the white marks, clean area with vinegar. Make sure to remove the Mop Pad/Cloth before storage. 7 28 9. USER'S GUIDE HOW TO ASSEMBLE THE H2O MOP X5™ ! WARNING DANGER OF SCALDING! WARNING Please make sure that the unit is unplugged from an electrical outlet Do not touch the Window Cleaning/Garment Steamer Tool or the Lint and the Power Switch (O/I) is in the "OFF" (O) position before Cloth during usage, as these components can get extremely hot. assembling the unit or changing the accessories. Keep the Extension Hose away from your body and avoid touching the hose, as it can get hot. 1) Attach the Mop Head to the Main Body as follows: Insert the Swivel Joint into 1a 1b 7) When the Hand-Held Steamer stops emitting steam, simply turn off and unplug designated hole in the Main Body until the unit, refill the Water Tank and continue cleaning. it locks in place with the Lock Button on the Main Body (you will hear a clicking 8) Once you finish cleaning allow the Lint Cloth to cool and carefully remove it sound). from the Window Cleaning Tool, as the Lint Cloth to the Mop Head is securely locked into place before usage. Coral Cloth for Mop Head is securely locked into place before usage. as provided for the Microfiber Cloth with Hook and Loop tape in the "HOW TO ASSEMBLE THE H2O MOP X5"" section in this manual. The Coral Cloth is soft and durable with hundreds of super absorbing fringes, ideal 2a 2b 2) Insert the Extension Handle into the for your sealed hardwood, ceramic and other types of flooring. designated opening in the Main Body Thane Direct and its affiliated companies assume no liability for personal injury or until it gets locked in place with the property damage resulting from the misuse of the H2O MOP X5[™], including the Extension Handle Lock Button. failure to comply with the instructions contained in this User Guide or provided by the manufacturer or distributor of the treated surface. 27 8 10. USER'S GUIDE 3) Insert the Curved Handle into the 8) Once you finish cleaning allow the Duster frame, as the Coral Cloth could still be hot. Handle until it gets locked in place with the Curved Handle Lock Button. LINT CLOTH Make sure that the H2O MOP X5™ is unplugged. Make sure both parts, the 1) Fill the Water Tank with water. Please refer to Extension Handle and the Curved the "HOW TO USE THE H2O Mop X5™" section Handle, are secured in place before in this manual. usage. 2) Install the Lint Cloth onto the Window Cleaning/Garment Steaming Tool and attach the Window Cleaning/Garment Steaming Tool to the Extension Hose as described in the "How To Assemble the Optional Accessories" section in this manual. 4a 4b 3) Select one of the following Steam Regulator 4) Turn the Lower Cord Wrap to align the cord channel opening with the cord positions: 1 - Low or 2 - Medium channel in the Extension Handle as Do not use 3 - High and 4 - Hot Spray steam settings when using the illustrated in Fig. 4a. Garment Steamer. Insert the Power Supply Cord all the way You can change the Steam Regulator position and the steam output while operating in its channel and turn the Lower Cord the H2O MOP X5TM. Wrap to lock the Power Supply Cord 4) Follow Step 3 described in the "How To Assemble the Optional Accessories" as illustrated in Fig. 4b. section in this manual. 5) Hold the Hand-Held Steamer in one hand and grasp the handle grip on the Extension Hose with the other hand as illustrated above. 6) Slowly pass over surface to be cleaned. The absorbent Lint Cloth picks up the dirt/hair loosened by the steam. Do not use on animals. ! CAUTION Pulling on the Extension Hose with excessive force will damage it, resulting in a steam leak. 9 26 11. USER'S GUIDE DUSTER Insert the Power Supply Cord into the 4c 4d Make sure that the H2O MOP X5™ is unplugged Cord Holder located at the top of the 1) Fill the Water Tank with water. Please refer to Extension Handle as illustrated in Fig. 4c and the "HOW TO USE THE H2O MOP X5" section then insert Power Supply Cord into the in this manual. Upper Cord Wrap as illustrated in Fig. 4d. 2) Install the Coral Cloth onto the Duster frame and attach the Duster to the Extension Hose as described in the "How To Assemble the Optional Accessories" section in this manual. 3) Select one of the following Steam Regulator positions: 1 - Low, 2 - Medium or 3 - High Do not use 4 - Hot Spray steam setting when using the Duster. 5) Place the Mircofiber Cloth on the 5a 5b You can change the Steam Regulator position and change the steam output bottom of the Mop Head and make sure while operating the H2O MOP X5[™]. all the loops on the cloth against the Mop Head so the loops on the 5) Hold the Hand-Held Steamer in one hand are gripp on the cloth catch the gripping strips on the Mop Head and hold the pieces together. Extension Hose with the other hand as illustrated above. 6) When using the H2O MOP X5TM 6a 6b 6) Slowly pass over surface to be cleaned. The absorbent Coral Cloth picks up the dirt loosened by the steam. Keep a towel handy and wipe away any excess water on carpet glider as illustrated in Fig. 6a. Do not Pulling on the Extension Hose with excessive force will damage it, possibly resulting attempt to use the H2O MOP X5TM unit in a steam leak. on carpet/rug surfaces without the carpet ! WARNING DANGER OF SCALDING glider in place. Do not touch the Duster/Coral Cloth during usage, as these components ! NOTICE can get extremely hot. Never use the carpet glider on surfaces Keep the Extension Hose away from your body and avoid touching the that are prone to scratching. hose as it can get hot. ! CAUTION 7) When the Hand-Held Steamer stops emitting steam, simply turn off and unplug the Never assemble or remove the accessories while the unit is in operation. unit, refill the Water Tank and continue cleaning. 25 10 12. USER'S GUIDE HOW TO USE THE H2O MOP X5™ PLEASE READ BEFORE USE 5) To steam a garment, place item of clothing on the hanger and steam the The H2O MOP X5™ is designed to thoroughly clean floor surfaces, such as marble, garment directly, ceramic, carpet, stone, linoleum, and sealed hardwood floors and parquet. Not all 6) Hold the Hand-Held Steamer in one hand and floor types are suitable for steam cleaning, grasp the handle grip on the Extension Hose with the other hand as illustrated. The heat and steam action my remove the wax on surfaces treated with wax. Do Slowly slide the Garment Steamer Head vertically, not use on unsealed flooring or let unit stand on any wood or heat sensitive floor from the top to the bottom of the garment. for an extended period of time. This could cause the wood grain to rise, in You may also reverse this motion and steam addition to other types of damage. from the bottom to the top. Curtains and draperies can be steamed while When using on vinyl, linoleum or any other heat sensitive floors, use extra caution. they are hanging. Too much heat can melt glue in the flooring. Use only on laminated flooring that! NOTICE has been laid professionally and without any gaps or cracks that would permit the entry of moisture. Please refer to label on item of clothing Test the H2O MOP X5[™] on a small isolated area of your flooring prior to overall use to check if garment can be steamed. on any floor surface. Some fabrics like leather, suede, and velvet may not be suitable for steaming the entire garment distributor before using the H2O MOP X5[™]. or fabric. When in doubt, please consult a flooring specialist. Only use the carpet glider! CAUTION: Pulling on the Extension Hose with excessive force will damage the streaking and possibly scratching. hose, possibly resulting in a steam leak. ! NOTICE! WARNING DANGER OF SCALDING This product emits steam and creates moisture. Water marks, discoloration Do not touch the Garment Steamer Tool/Cloth during usage, as these or damage to the floor surface can occur if the unit is left operating too components can get extremely hot. long in one place. Keep the Extension Hose away from your body and avoid touching the unit, refill the Water Tank and continue cleaning. 8) Once you finish cleaning allow the Garment Steamer Cloth to cool down and carefully remove it from the Window Cleaning Tool, as the Garment Steamer Cloth could still be hot. 11 24 13. USER'S GUIDE 6) When the Hand-Held Steamer stops emitting steam, simply turn off and unplug 1) Fill the Water Tank with water: the unit, refill the Water Tank and continue cleaning. ! CAUTION 7) Once you finish cleaning, allow the Coral Cloth to cool down and carefully Make sure that the H2O MOP X5™ is unplugged. remove it from the Window Cleaning Tool, as cleaning cloth could still be hot. Turn the Water Tank cap counter-clockwise approximately 90° to the! NOTICE "OPEN" position and remove the cap as illustrated in Fig. 1a, b and c. • Do not use the steam to clean frozen windows. • Be careful when using the steamer on glass, as it may break. 1a 1b 1c GARMENT STEAMER Make sure that the H2O MOP X5[™] is unplugged. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™] is unplugged. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™] is unplugged. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™] is unplugged. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™] is unplugged. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™] is unplugged. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™] is unplugged. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™] is unplugged. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™] is unplugged. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™] is unplugged. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™] is unplugged. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™] is unplugged. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™] is unplugged. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™] is unplugged. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™] is unplugged. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™] is unplugged. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™] is unplugged. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™] is unplugged. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™] is unplugged. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™] is unplugged. 1) Fill the Water Tank with wa attach the Window Cleaning/Garment Steaming Tool to the Hold the mop at a 45° angle as illustrated in Fig. 1d and add water in the tank up Extension Hose as described in the "How To Assemble the Optional Accessories" to the MAX level by using the measuring cup. section in this manual. Do not overfill. The maximum tank capacity is 400 ML/13.5 OZ. 3) Select one of the following Steam Regulator positions: 1 - Low or 2 - Medium when using the Garment Steamer. 1d 1e 1f Do not use 3 - High and 4 - Hot Spray steam settings when using the H2O MOP X5. 4) Follow Step 3 described in the "How To Use the Hand-Hand Steamer" 45º section in this manual. 23 20 12 14. USER'S GUIDE HOW TO USE OPTIONAL ACCESSORIES Replace the Water Tank cap and 1g 1h WINDOW CLEANING TOOL turn clockwise approximately Make sure the H2O MOP X5™ is unplugged. 90° to the "CLOSE" position until the cap is tightened 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O securely. MOP X5[™]" section in this manual The H2O MOP X5[™]" uses tap 2) Install the Coral Cloth onto the Window Cleaning Tool and attach the Window water. However, in areas Cleaning Tool to the Extension Hose as described in the "How To Assemble the with hard" water, distilled Optional Accessories" section in this manual water should be used for better performance. 1i Make sure the Copper Cone inside the Water Tank is always 3) Follow Steps 2 and 3 described in the "How submerged in water (As illustrated in Fig. 1i) while operating To Use the Hand-Hand Steamer" section in this the H2O MOP X5TM manual.! NOTICE 4) Hold the Hand-Held Steamer in one hand as illustrated. This will make operation unsafe and damage the unit. 5) Slowly pass over glass (or other similar) surface 2) Select one of the following Steam Regulator positions: to be cleaned. Apply steam liberally. 2 The absorbent Coral Cloth picks up the dirt 1 - Low, 2 - Medium, 3 - High and 4 - Hot Spray loosened by the steam, and the squeegee blade removes any remaining trails of water. excess water that may accumulate. all hard floors, such as linoleum, ceramic, marble, ! CAUTION wood, etc. Pulling on the Extension Hose with excessive force will damage it, possibly resulting: Ideal for cleaning Do not touch the Window Cleaning Tool/Coral Cloth during usage, as bathrooms, kitchens, window sills, car wheels, etc. these components can get extremely hot. You can change the Extension Hose away from your body and avoid touching the hose as it can get hot. 20 13 20 22 15. USER'S GUIDE This may also happen if the Power (lower position) after previous use and the unit was disconnected by unplugging only. Cord to a grounded electrical outlet. The RED light - Power Indicator will indicate Make sure to turn the unit off after each use and then disconnect from the Weit for the Ready-to-Use indicator to turn Green - approximately 20 - 30 seconds. GREEN light will turn on when the Ready-to-Use indicator light turns Green press the Power Switch (O/I) handy and wipe away any excess water that may accumulate, to the ON (I) position (lower position). The mop will start emitting steam. To stop emitting steam turn OFF (O) the unit by pressing the Power Switch (O/I) is pressed Red - Power ON Green - Ready to use the unit, refill the Water Tank and continue cleaning. (lower position) prior to Ready-to-Use To sanitize your work surfaces, kitchen countertops, sinks, bathrooms, etc., use light indicator turning green, water from the Hand-Held Steamer over the same area for about 15 seconds. the previous use will not be heated and will be forced out by present steam! NOTICE and will cause puddling to occur. Do not carry out this procedure on heat and steam sensitive surfaces. This may also happen if the Power The force and heat of the steam may adversely affect certain materials. Always Switch was left in the ON (I) a hidden area. and the unit was disconnected by Position Position (Higher) (Lower)! WARNING unplugging only. Make sure to turn the unit of steam towards people, animals or plants. then disconnect from the electrical! NOTICE outlet so the unit is in the OFF (O) position when used next time. • Do not use the steam to clean frozen windows. • Be careful when using the steamer on glass, as it may break. 4) Slowly pass over the surface to be cleaned by the steam. Apply steam liberally. Keep a towel handy and wipe floors, synthetic fabrics, velvet or other delicate steam-sensitive materials. away any excess water that may accumulate. Thane Direct and its affiliated companies assume no liability for personal injury or 5) When the H2O MOP X5[™], including the the appliance, refill the Water Tank and continue cleaning, failure to comply with the instructions contained in this User Guide or provided by the manufacturer or distributor of the treated surface, 20 21 20 14 16. USER'S GUIDE! WARNING HOW TO USE HAND-HELD STEAMER Never leave the H2O MOP X5™ unattended while plugged in.! CAUTION For Best Results: Make sure that the H2O MOP X5[™] is unplugged. 1) Sweep or vacuum floor prior to using the H2O MOP X5[™] is unplugged. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™]. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™]. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™]. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™]. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™]. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™]. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™]. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™]. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™]. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™]. 1) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™]. 2) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™]. 2) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™]. 2) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™]. 2) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™]. 3) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™]. 3) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™]. 3) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™]. 3) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™]. 3) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™]. 3) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™]. 3) Fill the Water Tank with water. Please refer to the "HOW TO USE THE H2O MOP X5[™]. 3) Fill the "HOW copper brush as be clean and dry for use. To replace the cleaning cloth, explained in the "How to assemble Hand-Held Steamer" section in proceed as follows: Let the cleaning cloth (Optional Item) and continue use. Select low steam regulator 2) Select one of the following Steam Regulator positions: positions: positions: positions: positions: position and 3) To sanitize an area of your floor, leave the H2O MOP X5™. at high steam setting over the steam area for about 10 seconds, 3) Once the unit has been fully assembled and filled with water, plug in but no longer than 15 seconds. the Power Cord into a grounded electrical outlet. ! NOTICE Do not carry out this procedure on heat and steam RED light - Power Indicator will indicate when power is on. sensitive floors. Power Switch (O/I) is in the OFF (O) position (higher position). ! Wait for the Readyto-Use indicator to turn Green - approximately 20 - 30 seconds. IMPORTANT • Never steam at one spot for too long. This can cause floor GREEN light turns green press the Power Switch (O/I) • Do not put hands or feet under the steam mop. Unit gets very hot. to the ON (I) position (lower position). • During use a pulsing noise may be heard indicating that the mop is producing The Hand-Held Steamer will start Red - Power ON Green - Ready to use steam. This is To stop emitting steam, turn OFF the also normal. unit by pressing the Power Switch (O/I) • The force and heat of the steam may adversely affect certain materials. Always again. If the Power Switch (O/I) is check the suitability of using the steam may adversely affect certain materials. Use light indicator turning OFF (O) ON (I) Position Position green, water from previous use will (Higher) (Lower) Thane Direct and its affiliated companies assume no liability for personal injury or not be heated and will be forced out property damage resulting from the misuse of the H2O MOP X5™, including the by present steam. failure to comply with the instructions contained in this User Guide or provided by the manufacturer or distributor of the treated surface. 20 15 20 20 17. USER'S GUIDE HAND-HELD STEAMING TOOL The Hand-Held Steamer for use on work surfaces, 4. To use the Window Cleaning tool as a Garment Steamer, install the Microfiber countertops, sinks, windows, mirrors, tiles and spot cleaning on floors, carpets and Cloth over the Window Cleaning/Garment Steamer Tool rugs. Use it with the Jet Nozzle, Brass brush or Nylon brush attachments to spray (as illustrated in Fig. 4a, 4b & 4c). away dirt, grease, mold and more. Black Tag 4a 4b 4c HOW TO ASSEMBLE HAND-HELD STEAMER! CAUTION Tag back side Make sure that the H2O MOP X5[™] 1a 1b is unplugged before assembly. 5. Attach the Window Cleaning/Garment 5a Steamer Tool to the Extension Hose as 1) Remove the Power Supply Cord from follows: Align the lock button on the upper cord wrap and cord holder, the Extension Hose with the designated turn the lower cord wrap to release the hole on the Window Cleaning/Garment cord and remove the Power Supply Cord Steaming Tool Frame and then push the from its channel as illustrated in Fig. 5a) Fig. 1a & 1b. 2a 2b 6a 6b DUSTER 2) Press the Extension Handle 6. Install the cleaning lock button and remove the Coral Cloth onto the Extension Handle from the Duster Frame (as Handle from the Duster Frame (as Handle from the Duster Frame). 3 Press the Lock button on Main Body. Illustrated in Fig. 6a & 6b). 3 Press the Lock button on Main Body 7. Attach the Duster Frame (as Handle from the Extension Hose as follows: and remove the Mop Head. 3a 3b Align the lock 7a 7b button on the Extension Hose with the designated hole on the Duster Frame and then push in the Extension Hose until it locks in place (as illustrated in Fig. 7b). 20 19 20 16 18. USER'S GUIDE HOW TO ASSEMBLE THE OPTIONAL ACCESSORIES 4) To attach the Jet Nozzle: Remove the Mop Head by pressing the Lock 4a 1a Insert the Jet Nozzle into the Button on the Main Body or remove the Jet designated hole in the Main Nozzle following the same procedure. Body until it locks in place with 1. Insert the designated end of the 1b the Lock Button on the Main Extension Hose into the designated Body (you will hear a clicking hole in the Main Unit until it locks in sound), as illustrated in Fig. 4a. 4b place with the Lock Button on the Main Body (you will hear a clicking sound) Make sure that the Extension Hose is securely locked into place before usage. 5) Attach either the round nylon brush or round copper brush by screwing onto WINDOW CLEANING TOOL the threaded end of the Jet Nozzle as illustrated in Fig. 5 a, b and c. 2. Loosen up the drawstring on the Coral Cloth and install the Coral Cloth and install the Coral Cloth and install the Coral Cloth and pull up the drawstring to secure the Coral Cloth in place. NOTE: Do not cover the squeegee blade. Make 5a 5b 5c sure to attach the Coral Cloth to all hooks on the Cleaning Tool Frame to prevent slipping or falling from the frame during use (as illustrated in Fig. 2a, 2b & 2c). 2a Hooks 2b 2c • The round nylon brush is great for cleaning smooth hard surfaces, Hooks such as toilets, sinks, and kitchen counters, etc. • The round copper brush is great for cleaning coarse or metal surfaces, front side such as brick floors, car wheels, metal doors, and metal frames, etc. 3. Attach the Window Cleaning Tool to the Extension Hose as follows: • Both brushes can also effectively clean the grease on pans, stoves Align the lock button 3a 3b and ovens in the kitchen. They can be used with soap or detergent to clean dirty on the Extension Hose areas, with the designated! NOTICE hole on the Window Never use the round brass brush on surfaces that are prone to scratching. Cleaning Tool Frame and then push in the Extension Hose until it locks in place (as illustrated in Fig. 3a & 3b). 17 20 18 20 19. Distributed by: Thane International, Inc., Thane Direct Canada, Inc., Thane Direct UK, Ltd., La Quinta, CA 92253 Mississauga, Canada Admail ADM3996, London, W1T 1ZU www.thane.com www.thane.c

